


Setup of Temperature Controller

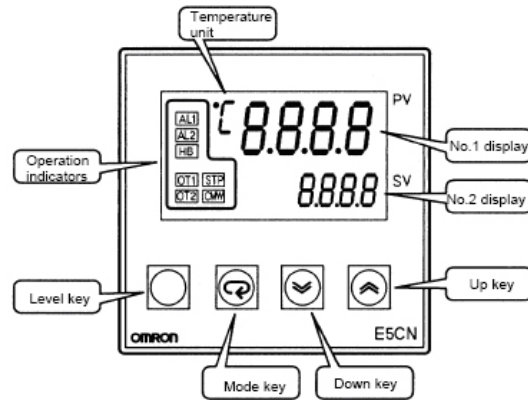

To program the E5CN press and hold the Level Key until the display changes to CN-E

Use the up and down arrows to change values

Use The Mode Key to shift between entries.

The settings are as follow

	F	C
CN-E	8	8
d-V	F	C
SL-H	430	220
SL-L	125	53
CNtL	PID	PID
S-HC	STND	STND
St	ON	ON
PtRN	OFF	OFF
CP	3	3
GREU	6R-R	6R-R
ALt-1	6	6
ALt-2	7	7
Press Level key and return to normal setup. Then enter the values below use mode key to move.		
r-5	run	run
AL-1	10	6
AL-2	10	6